



AF Type Support Unit

Angle Type for Support

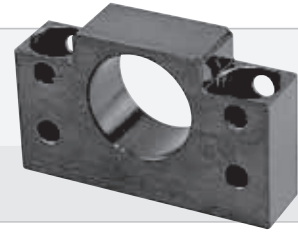

AF 8 ~ 20

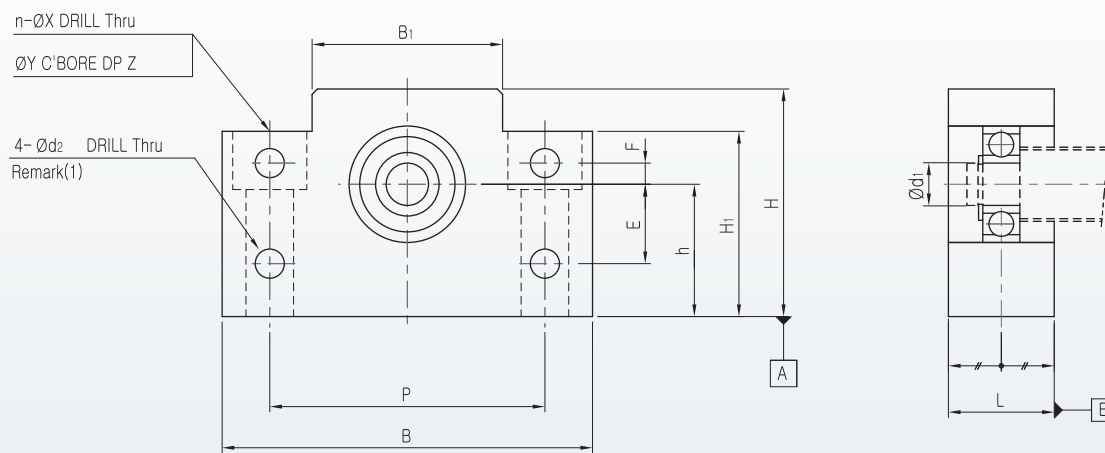

Remark (1) : AF20 is no Hole

Note

1. Installation can be conducted based on the surface of A and B. Please, use the spacer of accurate size when adjustment of height or length is necessary.



Unit : mm

Model No.	d ₁	L	B	H	h±0.02	B ₁	H ₁	E	F	P	d ₂	X	Y	Z	Mess(g)	Bearing	Snap Ring
AF8	6	15	52	32	17	25	26	10	4	38	5,5	6,6	11	12	130	606ZZ	C6
AF10	8	20	70	43	25	36	35	15	4	52	6,6	9	14	11	320	608ZZ	C8
AF12	10	20	70	43	25	36	35	15	4	52	6,6	9	14	11	300	6000ZZ	C10
AF15	15	20	80	50	30	41	40	15	4	60	6,6	9	14	11	370	6002ZZ	C15
AF20	20	26	95	58	30	56	45	-	-	75	-	11	17	15	660	6204ZZ	C20